

Event Agent

Version: April 2001

Event Agent

This auxiliary program offers you the possibility of monitoring events online at the lockings.

- Requirements for installing the EventAgent:
 - Operating system Windows-NT/2000
 - Main memory 64 MB
 - The computer must be integrated in the internal Windows-NT network
- ☞ The software must be installed by your system administrator.

Insert the SimonsVoss CD. In Windows Explorer, select the CD-ROM drive and click on **Software** → **EventAgent** → **English** → **Setup.exe**. Follow the setup instructions. Restart your computer after ending the installation.

One way to start the program is in the Windows **task bar**. To do this, click on **Start** → **Programs** → **EventAgent**.

Please note that only messages that were previously configured in the event manager are displayed.

New Event

Name: Access

Description: Message to Event Agent

Message: opens the door

Type: Entry

Lockings: Choose

Main entrance, Sample

Configure event

Activated

Reactions: Network message

Add

Delete

Alarm lev.

Message

Warning

Alarm

OK


Configure times

Cancel

Event Agent

When a new message comes in, you receive the notification **New message**. Once you have read the message, set a checkmark in front of *Read* and the message is extinguished. The same holds true if you click on the button **All read**. However, the messages remain in memory and can always be called up again. Set the number of saved messages under **Options**.

You can change to the received messages using the navigation window.

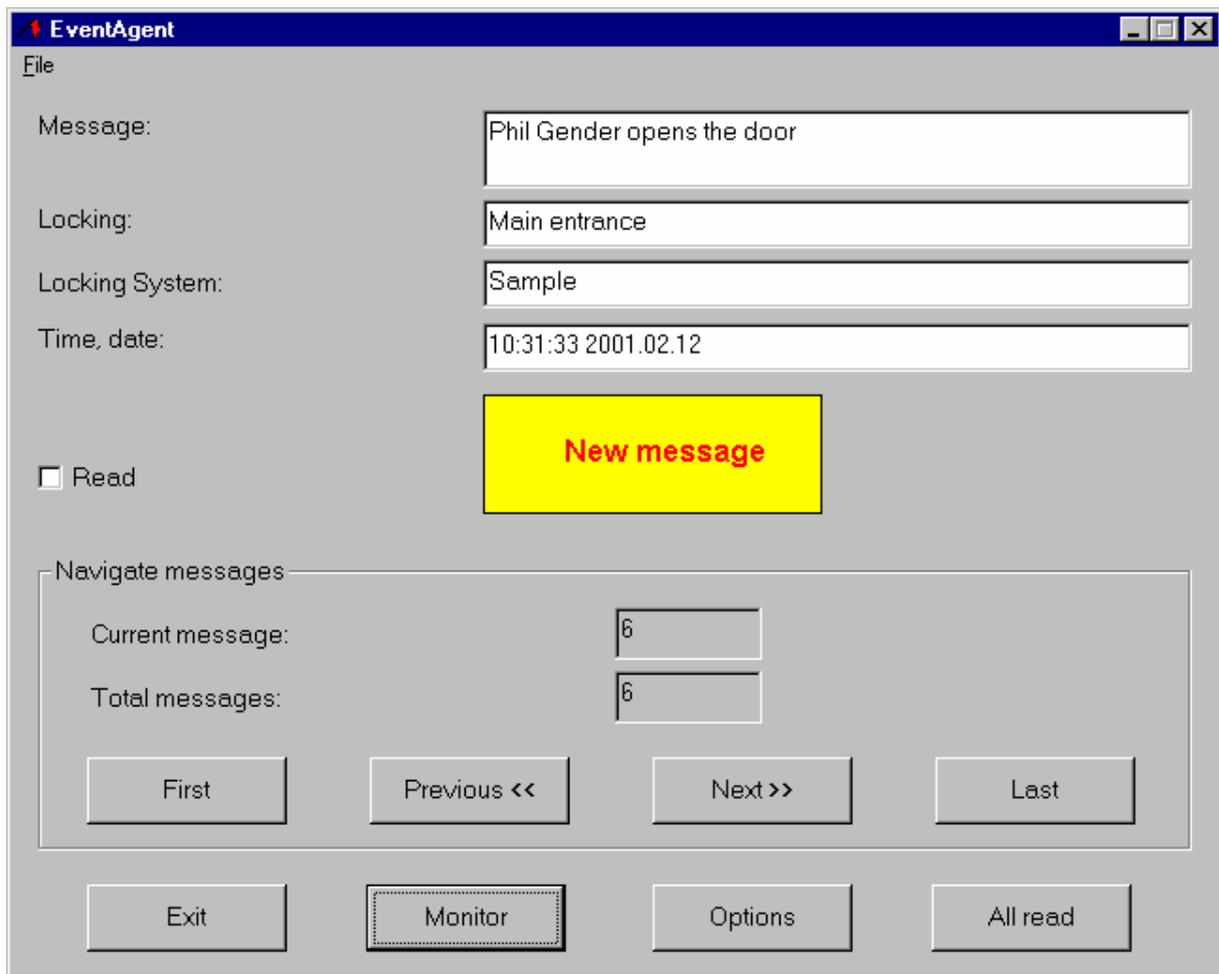

Event Agent

Page 4

Options

Here you can make the following settings:

- **Beep signal for new message**
Signal tone when message is received.
- **Activate EventAgent upon new message**
If you have minimized the window (task bar), it will be made visible again when a new message is received.
- **Maximum number of messages**
Between 100 and 5000 messages can be listed.




Confirm your entries with **OK**.

Event Agent


Monitor

You receive an evaluation of the messages in **Monitor**.

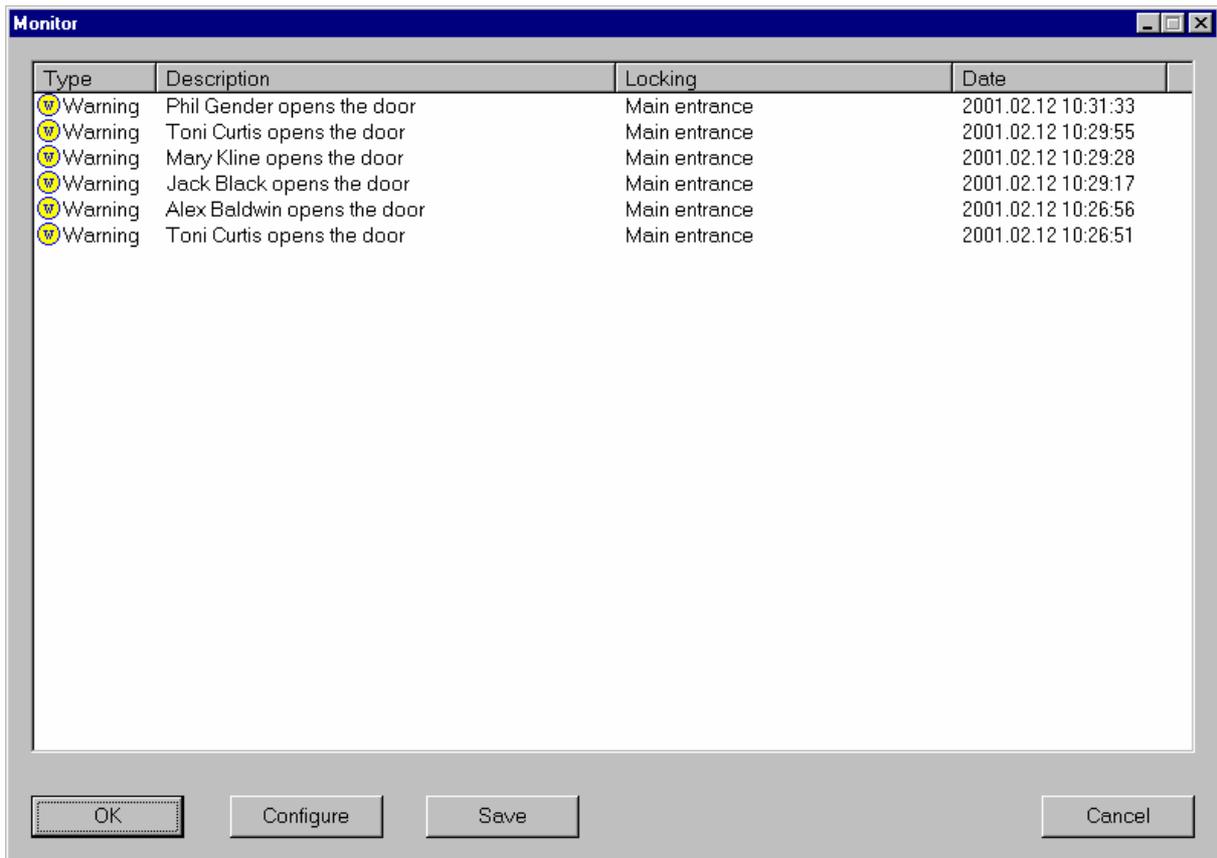

Configuration

A filter mask is available here:

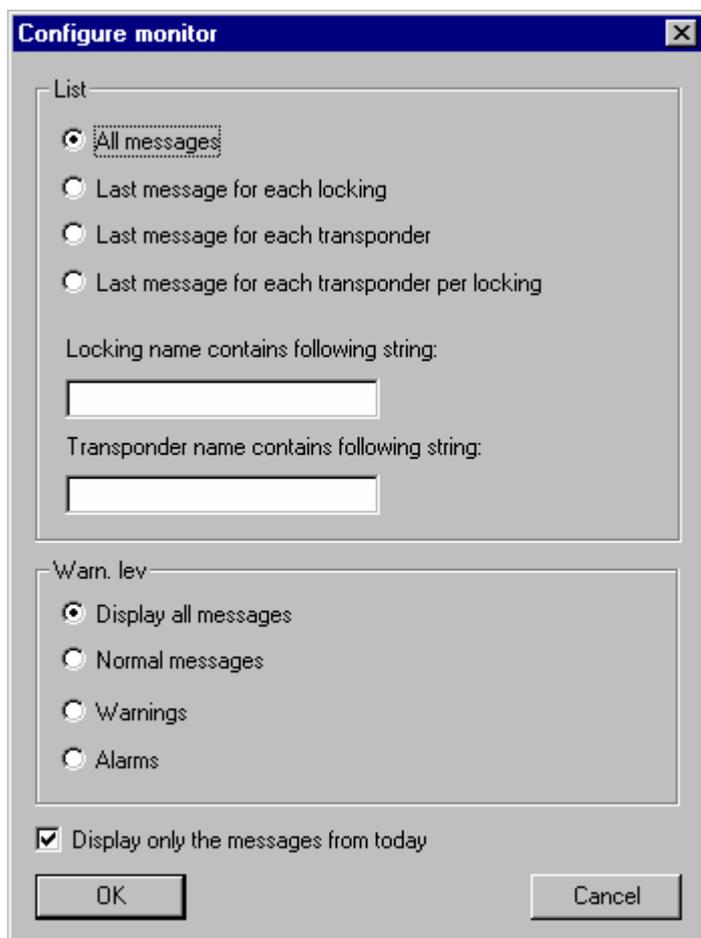

- **List**

- **All messages**

- All messages are listed.

- **Last message for each locking**

- Ex.: If you have equipped your door with Reed contacts, you can have the state of the door, i.e., open or closed, displayed.

Last message for each transponder

Ex.: You have installed two control units in the building. In the morning, the employees sign in at one control unit, at the other they sign out. You can now poll the current status and then tell whether an employee is on the premises or not.

Last message for each transponder per locking

Ex.: Let's stay with the last example. With this function, you can now tell how long the employee was on the premises.

You can additionally filter these messages so that only particular lockings and/or transponders are listed. Enter the character string that you want to use for filtering.

☺ The software distinguishes between small and capital letters.

Example:

Enter the locking name:	trance
Displayed are:	main entrance
north entrance	
workshop entrance door	

● **Warning levels**

Every event receives a warning level in the event manager. You can have all messages listed, or only particular ones such as normal messages, warnings or alarms.

● **Display only the messages from today**

Deactivate this window if you want to look back over previous days.

Confirm your entries with **OK**.